

How to – Change Language (touch)



Flip the red switch on the device's backside „ON“ („I“)

Press within two seconds the „M“ button and hold it until you hear a voice.



Tap as often as necessary on „start/stop“ until the required language appears.



After the right language appeared, just press the „on/off“ button to save it.



Flip the main power switch „off“ and „on“.

Now you can use the device as usual.

If there should be more problems, please contact: support@moneual.es